

# Classroom Sound Reinforcement

- Each classroom is equipped with a wireless microphone. When powered on, the microphone transmits sound through the speakers in your ceiling.



- You can use the handheld wireless microphone and the pendant wireless microphone.
- You have two microphone channels so you can use two microphones in your room at a time.
- To use the handheld wireless microphone:
  - Make sure that the microphone is charged.
  - Turn it on using the power switch on the side
  - Turn up the volume, using (by default) the Teacher 2 knob.



- To use the pendant wireless microphone:
  - Loop the lanyard around your neck so that the microphone is 6 to 8 inches from your mouth.
  - On the side of the pendant microphone is a power switch. Turn the microphone on.



Power Switch Here

- When you turn the microphone on the light on the front of the body pack will turn green. If the light is red that means that the battery is charging.
- Adjust the volume of the microphone on the silver receiver. Make sure you pay attention to the channel that your microphone is set to (default Teacher 1).

### **Your Receiver:**



Power

TV/DVD

Computer Volume

Teacher 1

Teacher 2

- Teacher Volumes – This controls the volume of the handheld and pendant microphones.

- TV/DVD Volume – This controls the volume of the DVD/VCR Deck.
- Computer Volume – This controls the volume from the teacher's work station.

**Things to remember:**

- If the microphone is not picking up your voice try the following things:
  - ✓ Adjust the volume on the silver box so that your voice is clear and audible. Your voice should sound natural. As a rule of thumb, the volume dial should be placed at the 12 o'clock position as a starting point and then adjusted up or down.
- Charge your battery every night. Be sure to push the charging cable all the way into the microphone case. A solid red light will appear on the pendant microphone.